




B6 BLENDER: HOW TO CLEAN

GENERAL BLENDER CARE: WEEKLY

The blender internally cleans and steam sanitizes itself every 24 hours, automatically. In addition to the daily automated clean and sanitize cycle, the following steps below are required:

- 1** OPEN FRONT DOOR OF THE BLENDING CHAMBER AND LIFT UP ON THE FLIP-UP DOOR by pressing upwards on the Flip-Up Door Arm with one hand and clean off any product build-up around the Blending Chamber rim with a clean, damp rag. **NOTE:** Be careful not to damage gasket.

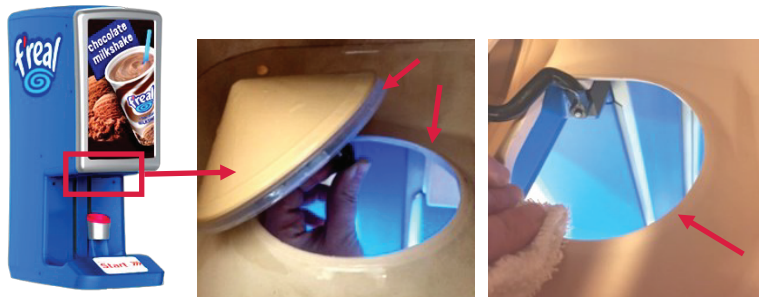

- 2** OPEN FRONT DOOR OF THE BLENDING CHAMBER and locate the seal from around the chamber opening rim and then (a) remove seal, (b) clean seal with clean, damp cloth and rinse, (c) clean chamber opening rim inside and out, and (d) reinstall the seal.



- 3** UNDER THE FRONT DOOR, YOU WILL FIND CUP SENSORS. Locate a clean, damp cloth and wipe them down.

